



17 Murray Dwyer Circuit, Mayfield West NSW 2323
PO Box 109, New Lambton NSW 2305
Email: mail@steelspan.com.au
Phone: 1300 851 377
Fax: 02 4950 9201
Web: www.steelspan.com.au
ABN: 51 155 660 503

Pegboard Cabinet 1860 Half Wall Assembly Instructions

Tools Required:

Cordless Drill with Phillips Head Drill Bit

Components:

Rear Wall Panel x 1



Side Panels x 2



Front Panel (with doors):



Self Tapping Screws x 14:




Roof Panel:



Floor Panel:



Shelves x 4:

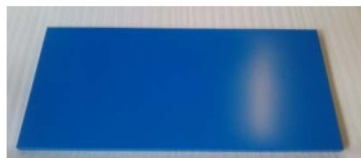

Shelf Supports x 20:



Assembly:

1. Fit the Left Wall Panel to the Rear Wall Panel and fix with self-tapping screws.





2. Fit the Right Wall Panel to the Rear Wall Panel and fix with self-tapping screws.



3. Insert the Front Panel (with doors) into the returns at the front of each Side Panel. No fixing required.





4. Insert the Roof Panel in to the upper cavity and fix with Self Tapping Screws.

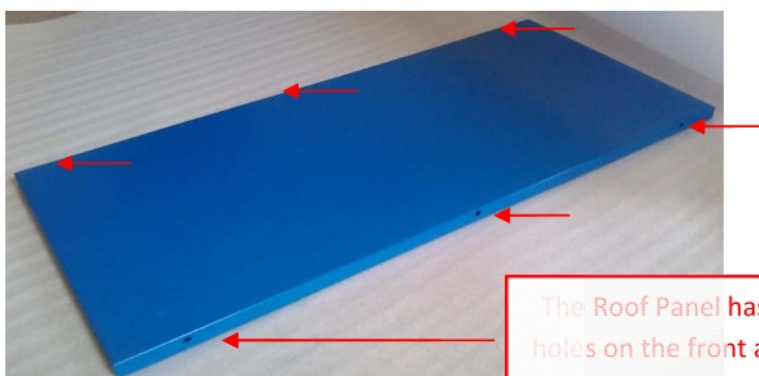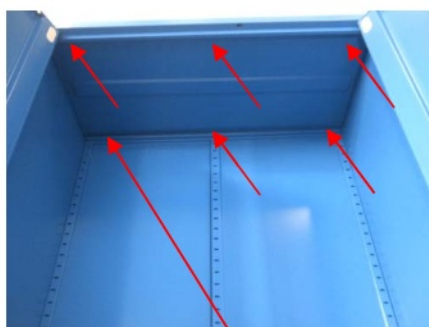

The Roof Panel has 6 holes on the front and rear face.

5. Insert the Floor Panel into the lower cavity, ensuring the left and right edge of the Floor Panel is inserted into the side rails. Further secure the cabinet floor with two self tapping screws.

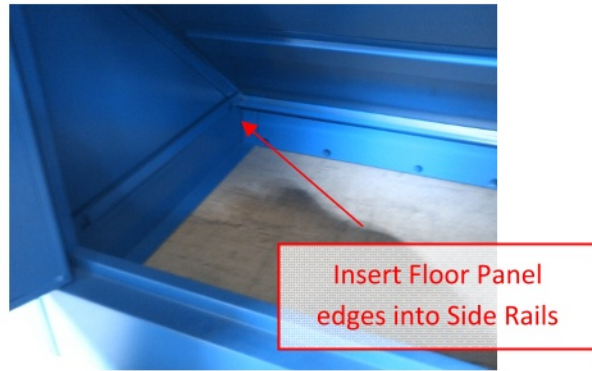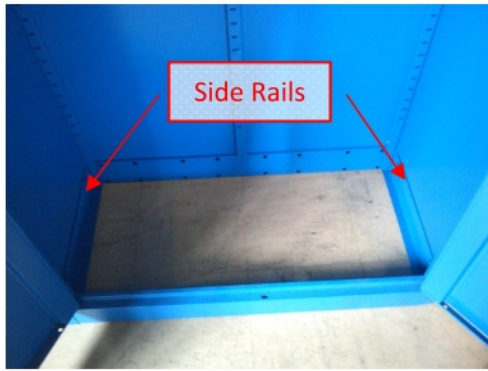

The Floor Panel has a single hole on the front and rear face.

6. Fit Shelf Supports at desired spacing and insert shelves.



7. Completed Cabinet 1860.



8. Fix two Tool Display 440 pegboard panels, side by side, to the upper rear of the Cabinet 1860. Fix to the rear centre and side vertical rails with Self Tapping Screws provided.

